



S1-001

一位开关



S1-002

二位开关



S1-003

三位开关



S1-004

四位开关



S1-005

二位开关
带二、三极插座



S1-006

一位开关
带二、三极插座



S1-007

一开带三孔16A



S1-008

一位多功能插座



S1-009

二极、多功能插座



S1-010

二、三极插座



S1-011

二、二、三极插座



S1-012

一位三极插座



S1-013

电话、电脑插座



S1-014

一位电视插座



S1-015

电视、电脑插座



S1-016

二位电视



S1-017

一位电话插座

一位电脑插座



S1-018

调光开关

调速开关



S1-019

人体感应天关




S1-020

刮须插座



S1-021

“请勿打扰”
门铃开关

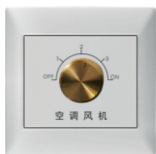

S1-022

空调风机



S1-023

插卡取电

智能感应插卡取电



S1-024

声光控延时开关(带白炽灯)

触摸延时开关(带消防)



S1-025

门铃开关



S1-026

空白面板